

Partition/Combi Shed Installation Instructions

Power Sheds can either be provided with Partitions (Combi Sheds) or ordered as an additional extra. The partition instructions are to be used along side the standard instructions provided.

Please note that on some of our combi sheds, the number of panels provided may vary from the amount noted in the component checklist.

E.g. 12x6 Power Pent Potting Shed Combi (inc. 6ft Store) will come with (7x) 2ft panels, whereas the component list in the standard instructions would only have (2x) 2ft panels.

You may also receive 4 additional Cover Lats depending on the size of the shed.

If you have any questions about your components, please contact us prior to installation.

An internal partition is used to separate the two sections of your shed. You will need to read these instructions thoroughly prior to starting your build, as you will need to take additional steps to the standard instructions provided.

Partition Component Table							
Pent Size	1190 HD Bearer	1790 HD Bearer	4ft Blank Panels	2ft Blank Panels	4ft Pent Gable Top	6ft Pent Gable Top	8ft Gable Top
4 Foot	1	0	1	0	1	0	0
6 Foot	0	1	1	1	0	1	0
8 Foot	2	0	2	0	2	0	1 (in two parts)
Apex Size	1190 HD Bearer	1790 HD Bearer	4ft Blank Panels	2ft Blank Panels	4ft Apex Gable Top	6ft Apex Gable Top	
4 Foot	1	0	1	0	1	0	
6 Foot	0	1	1	1	0	1	

*Please note, depending on the size selected, you may be provided with a Gable Top as part of the partition which would replace one of the Trusses listed in the standard instruction component list.

Partition/Combi Shed Installation Instructions

- When installing the floor, you will need to fit the additional Heavy Duty floor bearer between the floor panels, at the point you want the partition to be positioned (*Image #1*).



(Image #1)

- You will then need to leave a 12mm gap as pictured, between the HD bearer and the next floor panel to allow the cladding of the partition panel to slot in.
- Continue to follow the standard instruction booklet until you get to the fitting of the wall panels.

- Fit the partition panel(s) (*Image #2 & #3*) when fitting your walls. If you have a 6ft or 8ft partition, you may have more than one panel. Secure these together with 50mm screws as you did with the rest of your walls.



(Image #2 & #3)

- Refer to the 'Gables' section of the instruction booklet and secure either an Apex or Pent gable top to the partition panels with 50mm screws, prior to fitting the roof (*Image #4 & #5*)



(Image #4 & #5)

- Continue to follow the standard installation instructions to complete your shed.

**** Please note with an Apex building, the roof overhang will be approximately 28mm rather than the 56mm stated in the accompanying instructions**

If you have any questions during installation, please ensure you contact Power Sheds directly:

Telephone: 01274 036 577 (Mon – Fri, 08:00 – 16:30, exc. Bank holidays)

Email: hello@powersheds.com

If you have a missing, damaged or incorrect component, please note we offer a replacement parts service and can usually despatch parts for delivery in 1-4 working days.

We cannot offer compensation in lieu of replacement parts, or reimburse for additional components purchased by the customer.

Always check all components prior to installation to avoid any delays, as we cannot cover for consequential losses.