


Base and Floor


Component list for 14x12 Base

- (2x) TANBAT-3400
- (26x) TANBAT-1956
- (11x) TANBAT-340

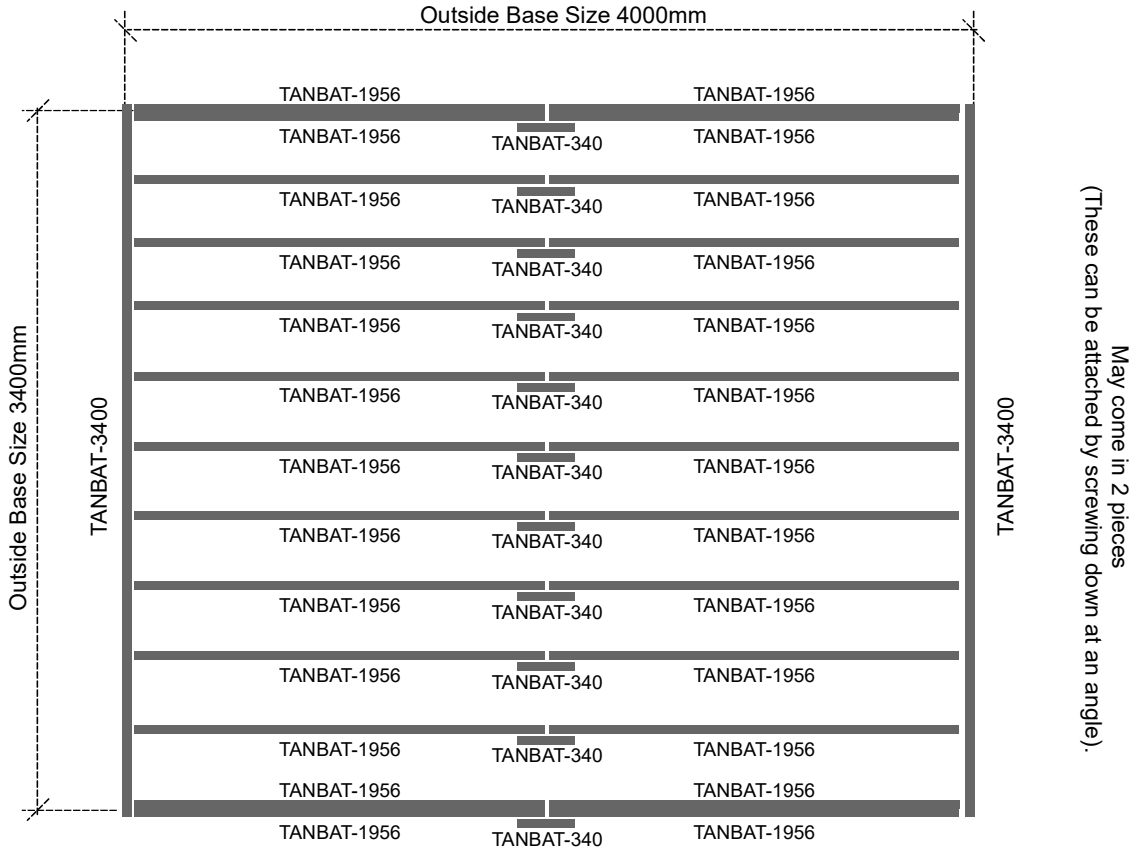


Component list for 14x12 Floor

- (35x) 19FB-3307
- (2x) SB-3912
- (2x) SB-3312

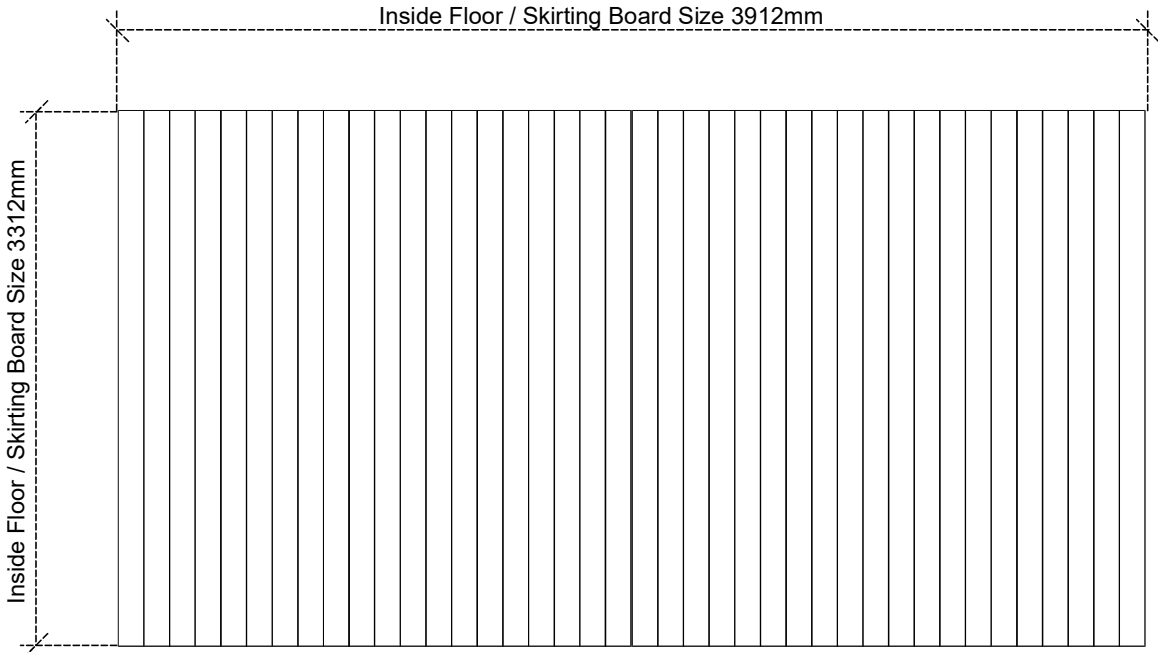





12' Blank Gable

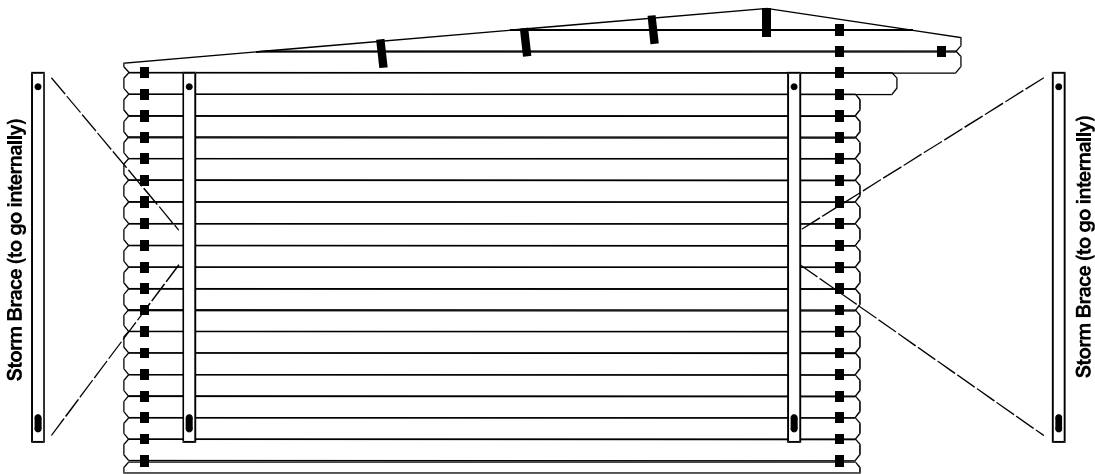


Build Diagram Order:-

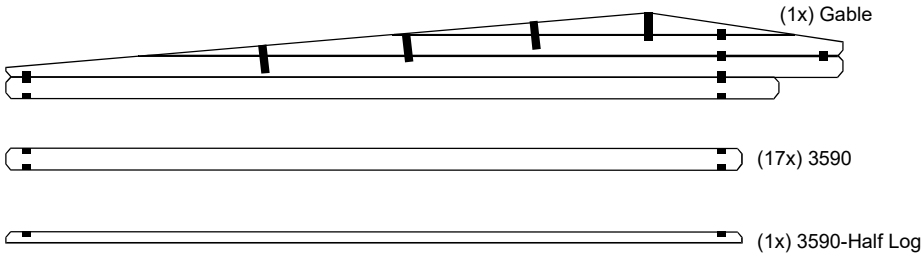

12' Window Gable

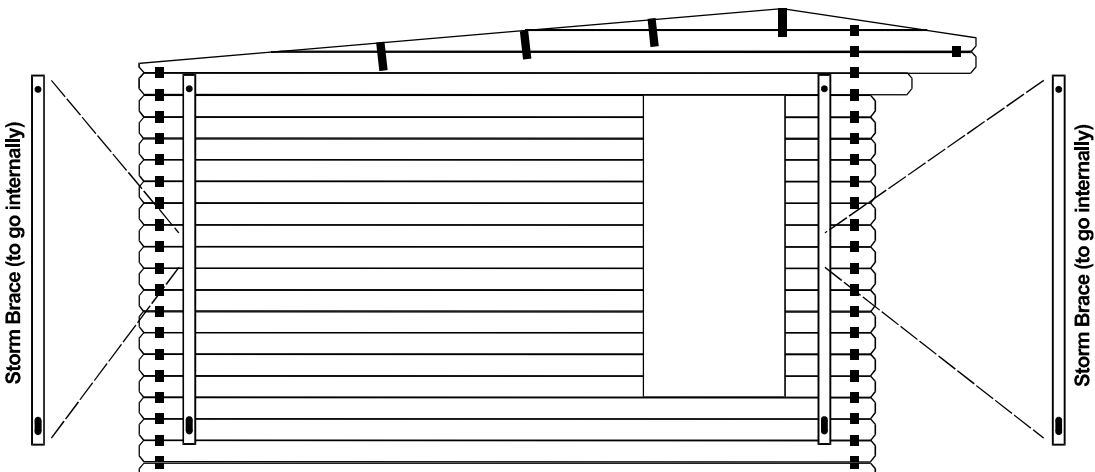


Build Diagram Order:-

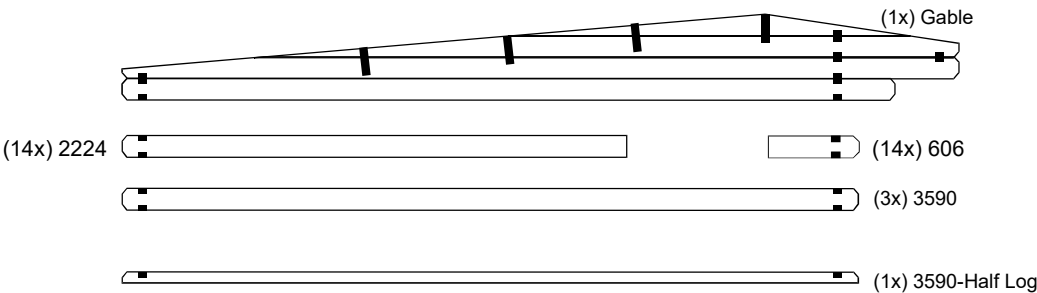





14’ Double Door Side

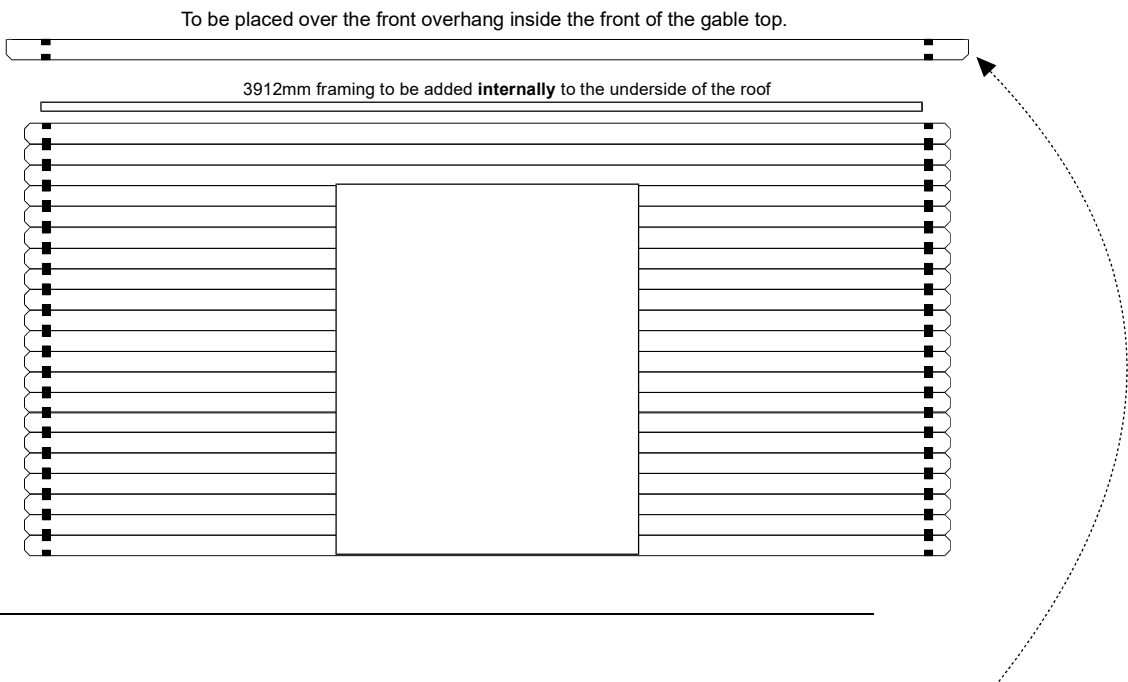


Build Diagram Order:-

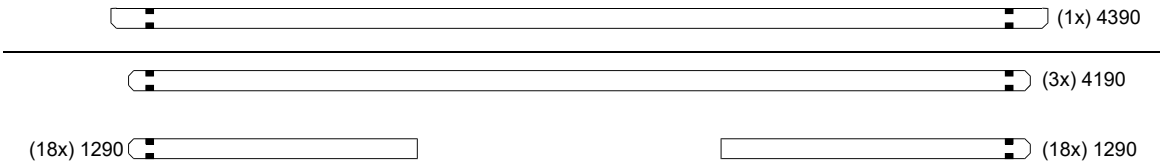

14’ Blank Side

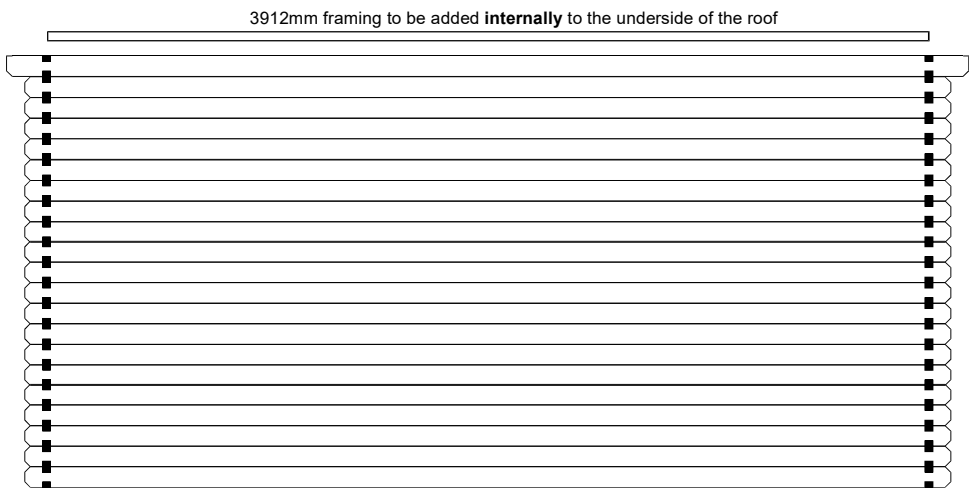


Build Diagram Order:-



14x12w Powersheds Offset Apex 44mm Powersheds®

- 1 Roof Purlin = (4x) 4390mm
- 2 Roof Framing = (2x) 4390mm
- 3 Roof Boards = (39x) 3307mm
- 4 Roof Boards = (39x) 1040mm
- 5 (2x) 12' Offset Roof Fascia A
- 6 (2x) 12' Offset Roof Fascia B
- 7 (2x) Peak

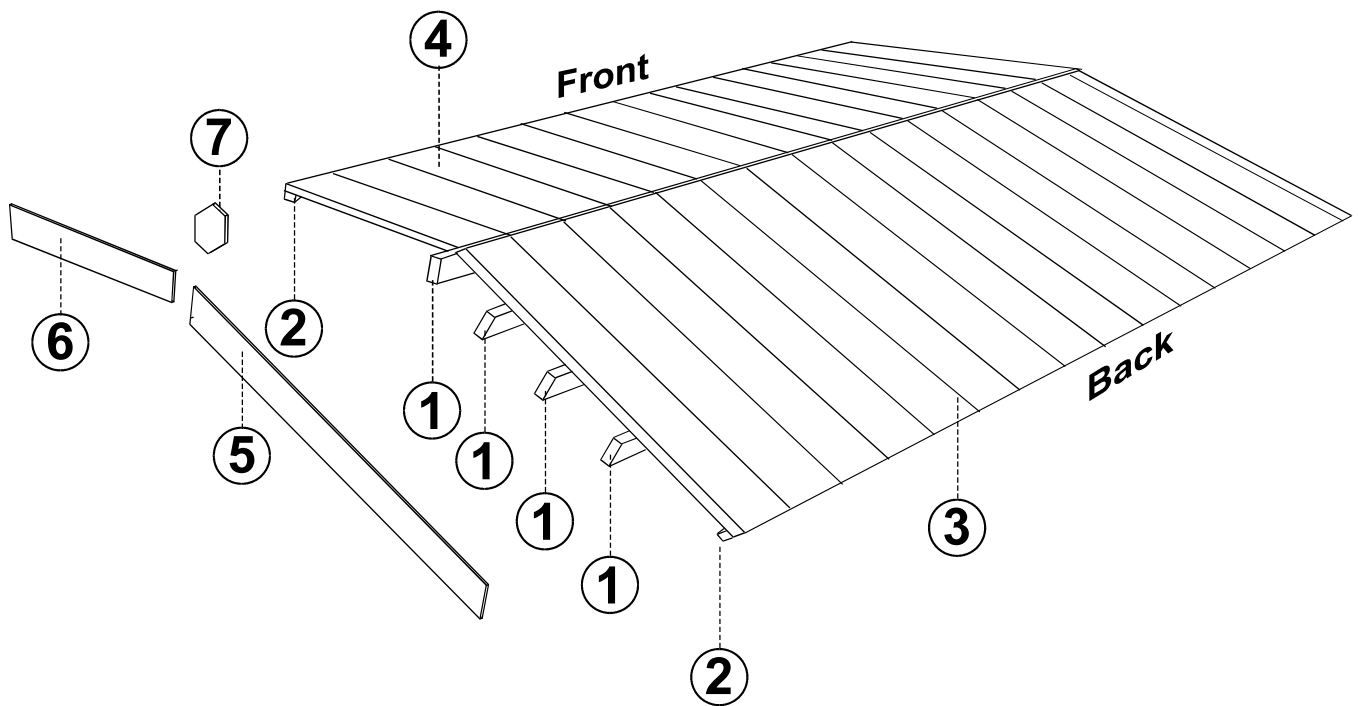

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.