




Base and Floor

Component list for 16x14 Base


- (2x) TANBAT-4000
- (28x) TANBAT-2256
- (12x) TANBAT-340

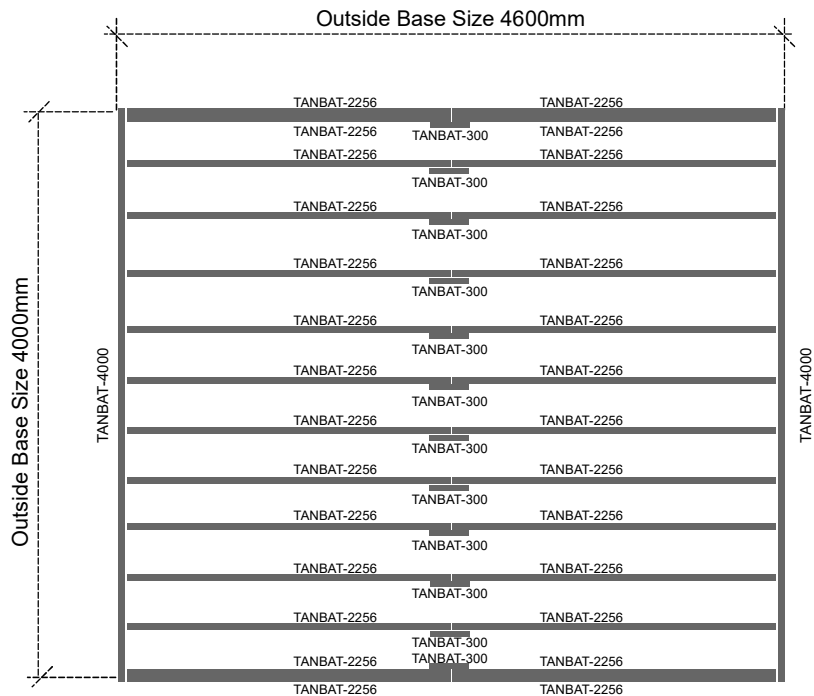

May come in 2 pieces
(These can be attached by screwing down at an angle).


Component list for 16x14 Floor

- (40x) 19FB-3907
- (2x) SB-4512
- (2x) SB-3912

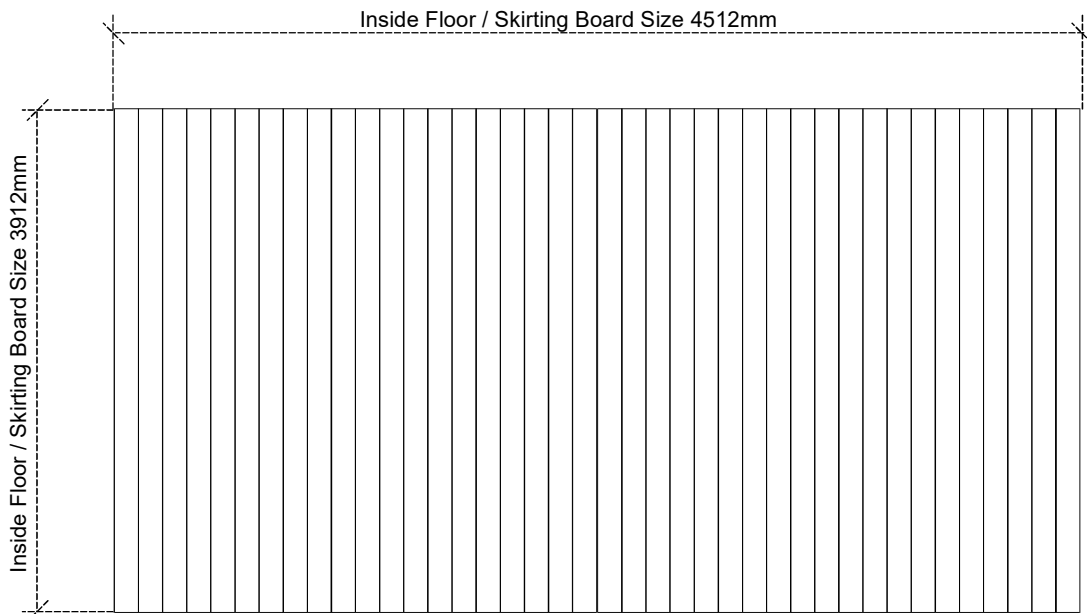





14' Blank Gable

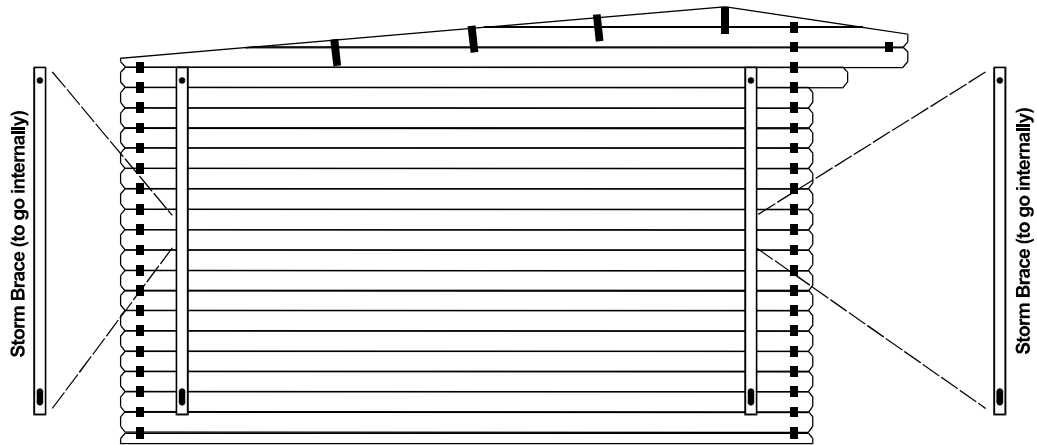


Build Diagram Order:-

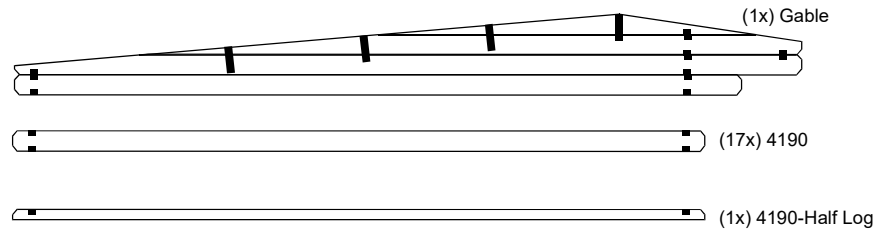

14' Window Gable

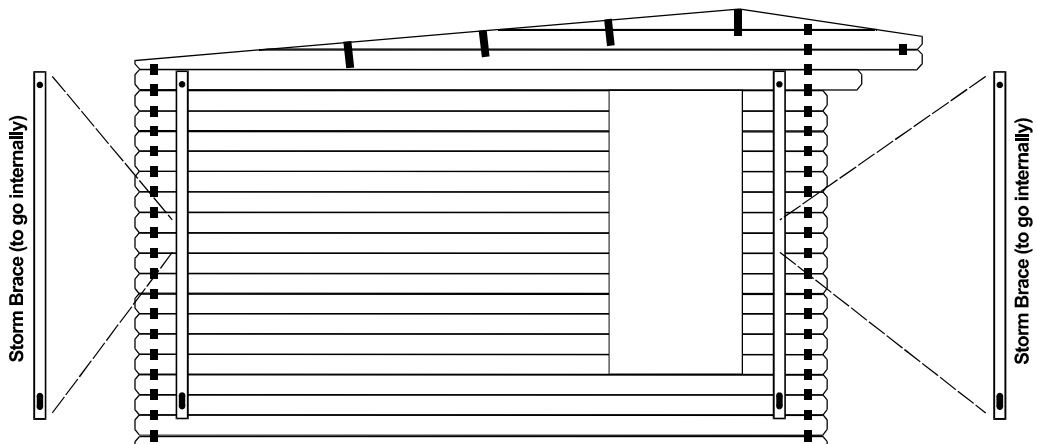


Build Diagram Order:-

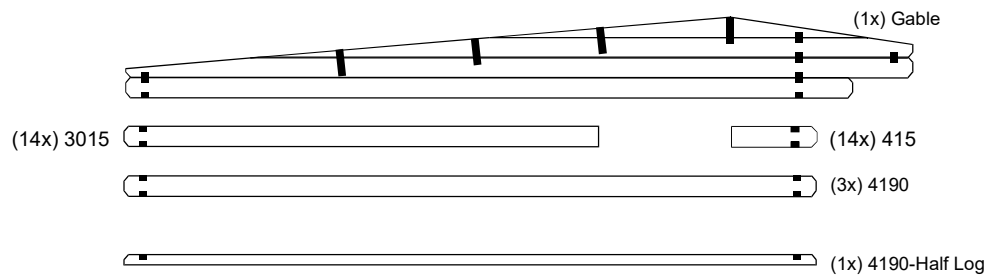




16' Window Window Double Door Side


To be placed over the front overhang inside the front of the gable top.




4512mm framing to be added **internally** to the underside of the roof

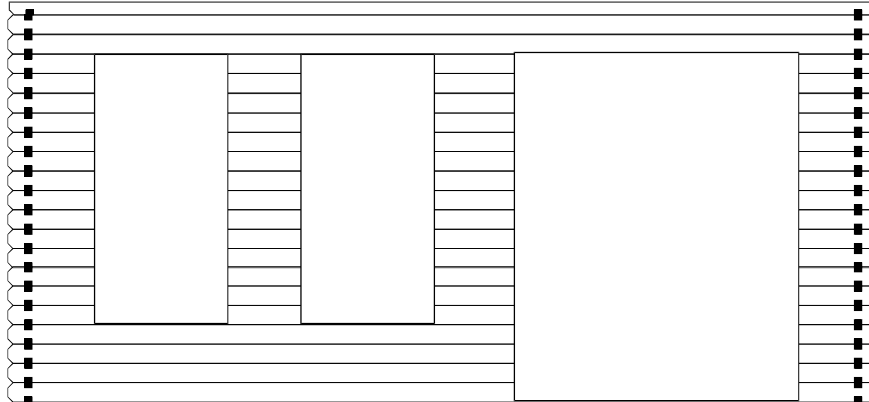

Build Diagram Order:-



(1x) 4990



(3x) 4790

(14x) 415

(14x) 415


(14x) 415

(18x) 415


(4x) 2765

16' Blank Side

4512mm framing to be added **internally** to the underside of the roof

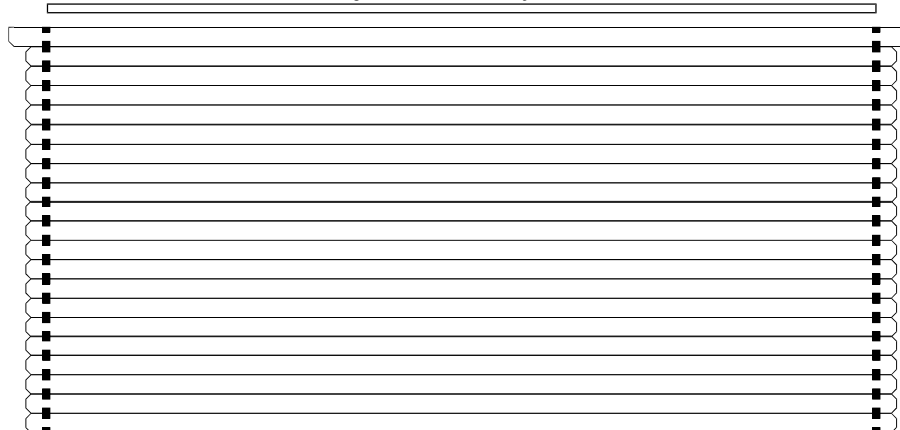

Build Diagram Order:-




(1x) 4990



(18x) 4790

16x14w Powersheds Offset Apex 44mm Powersheds®

- 1 Roof Purlin = (4x) 4990mm
- 2 Roof Framing = (2x) 4990mm
- 3 Roof Boards = (44x) 3907mm
- 4 Roof Boards = (44x) 1040mm
- 5 (2x) 14' Offset Roof Fascia A
- 6 (2x) 14' Offset Roof Fascia B
- 7 (2x) Peak

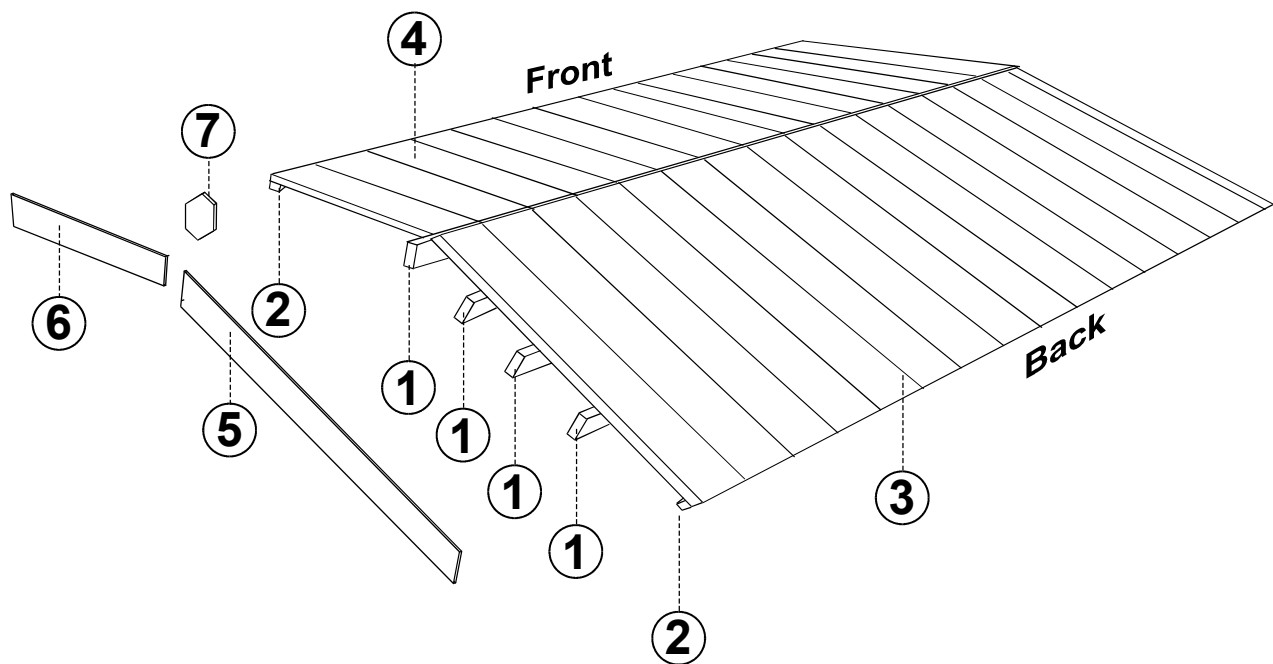

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.