




18x16w Powersheds Offset Apex 44mm 1816PALCWWDD

Powersheds®

Base and Floor


Component list for 18x16 Base

- (2x) TANBAT-4600
- (32x) TANBAT-2556
- (14x) TANBAT-340

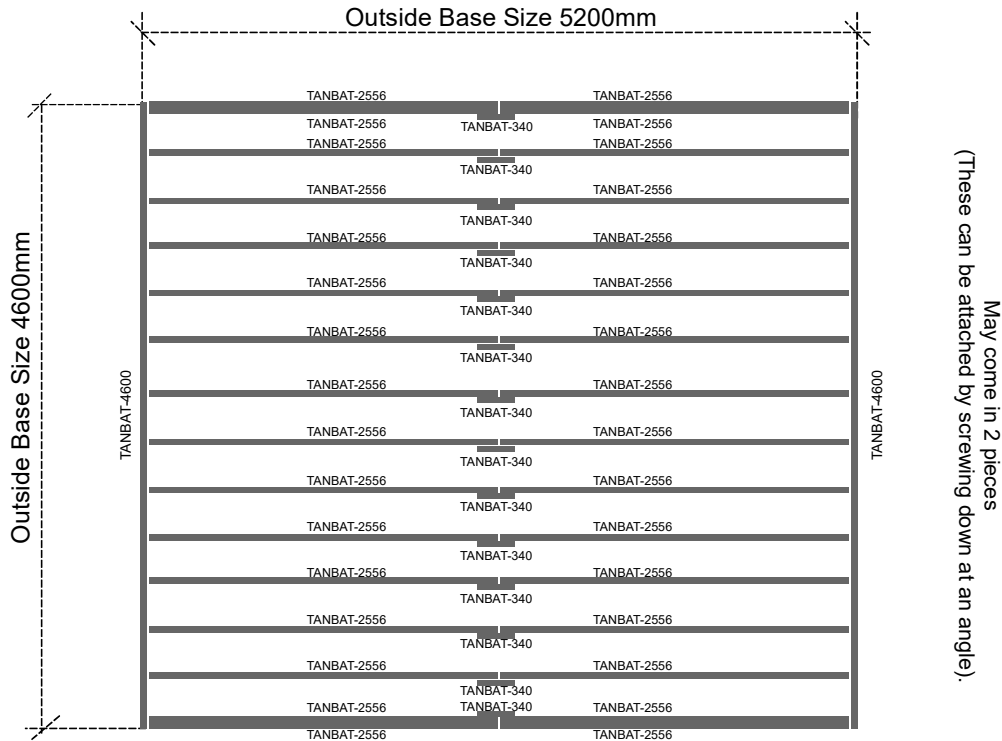


Component list for 18x16 Floor

- (45x) 19FB-4507
- (2x) SB-5112
- (2x) SB-4512

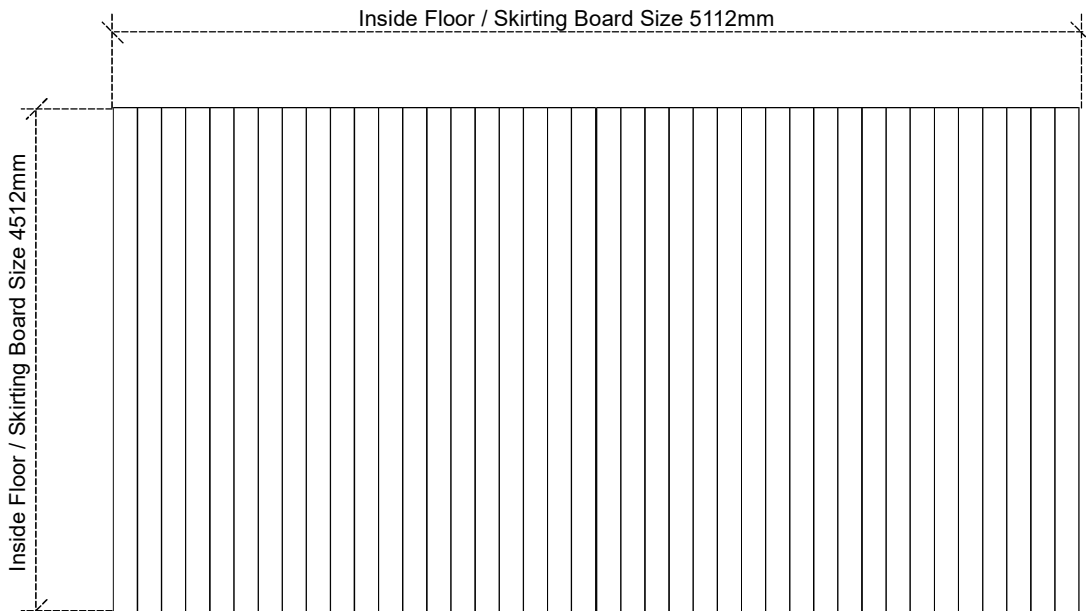





16' Blank Gable

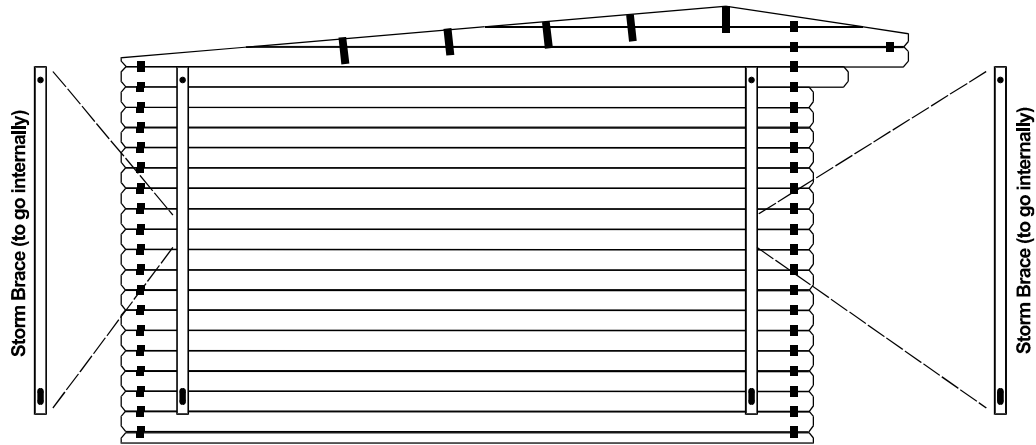


Build Diagram Order:-

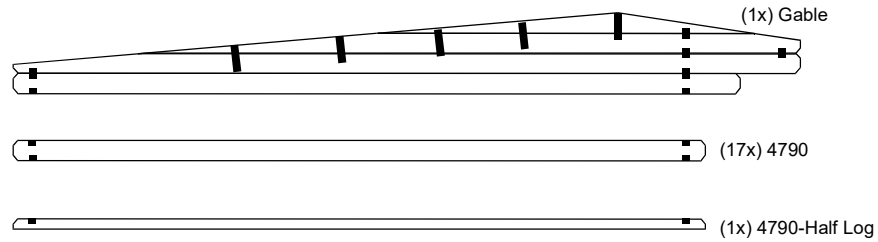

16' Window Gable

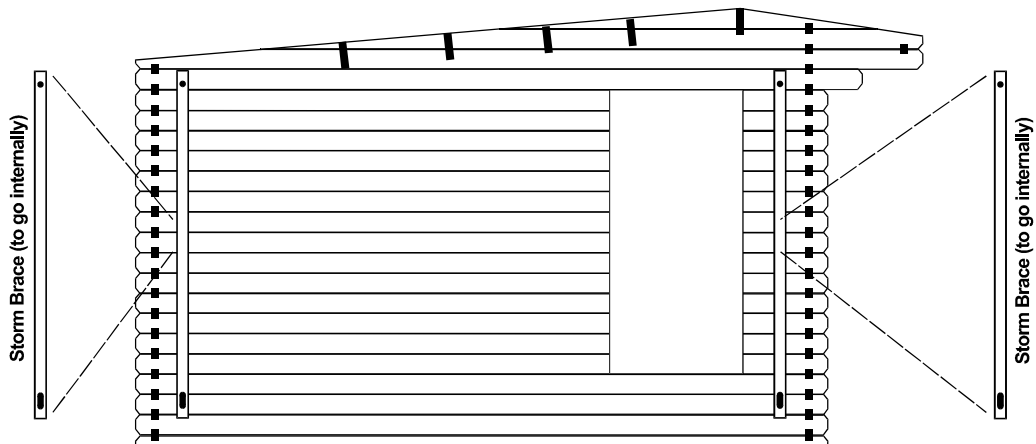


Build Diagram Order:-

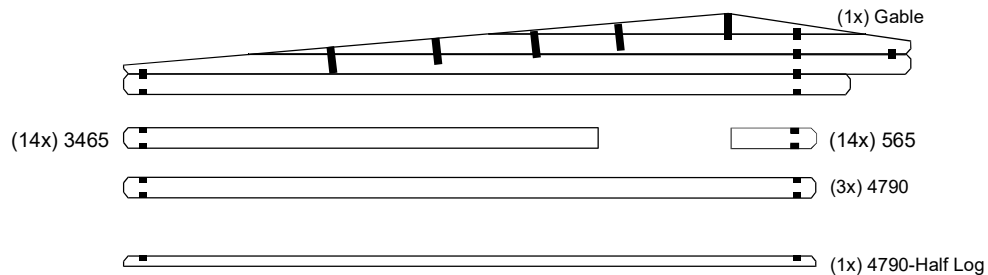




18' Window Window Double Door Side


To be placed over the front overhang inside the front of the gable top.




5112mm framing to be added **internally** to the underside of the roof

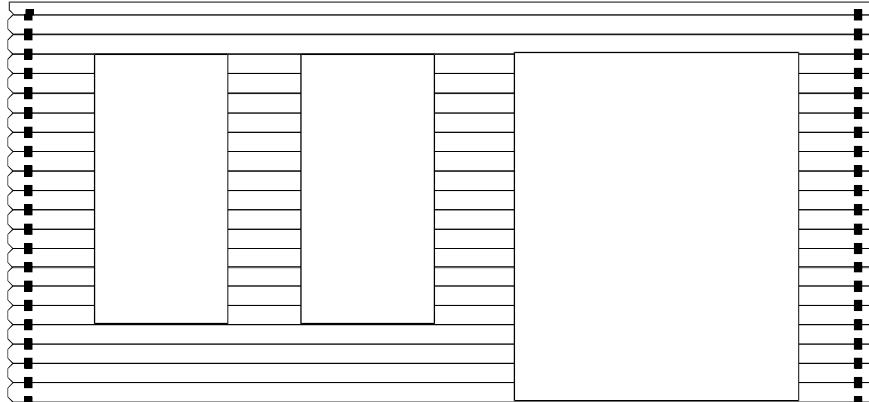

Build Diagram Order:-



(1x) 5590




(3x) 5390

(14x) 565

(14x) 565

(14x) 565


(18x) 565




(4x) 3215

18' Blank Side


5112mm framing to be added **internally** to the underside of the roof

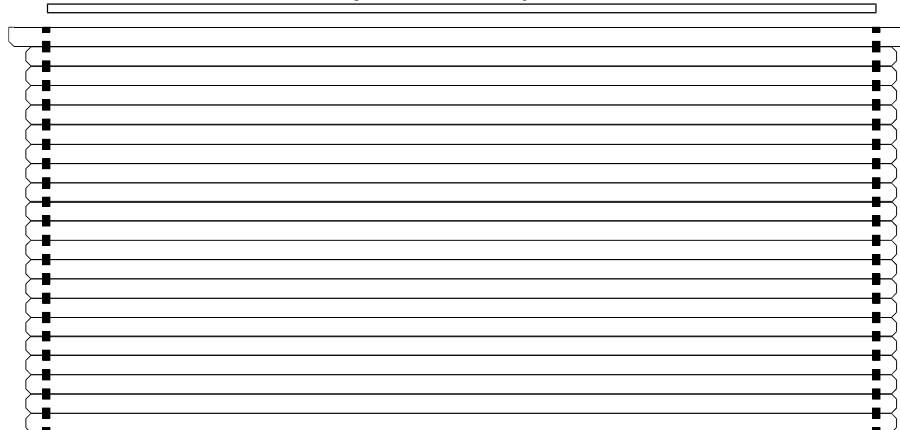

Build Diagram Order:-




(1x) 5590



(18x) 5390

18x16w Powersheds Offset Apex 44mm Powersheds®

- 1 Roof Purlin = (5x) 5590mm
- 2 Roof Framing = (2x) 5590mm
- 3 Roof Boards = (50x) 4507mm
- 4 Roof Boards = (50x) 1040mm
- 5 (2x) 16' Offset Roof Fascia A
- 6 (2x) 16' Offset Roof Fascia B
- 7 (2x) Peak

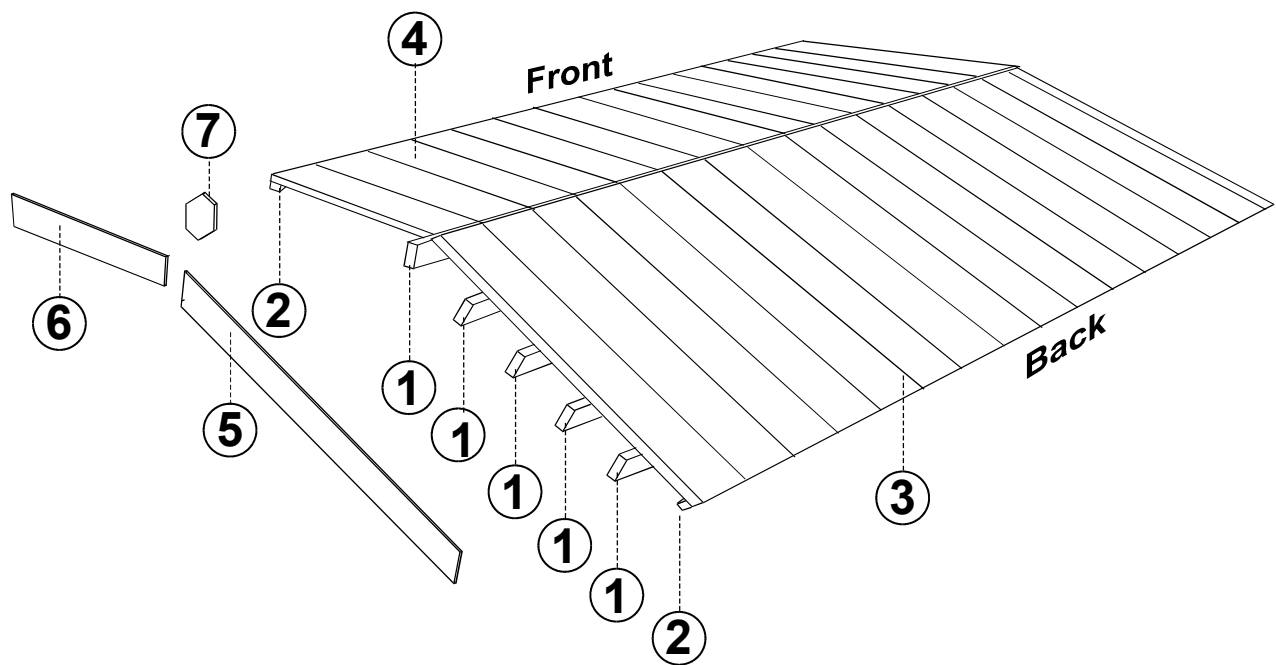

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.