


Base and Floor


Component list for 20x18 Base

- (2x) TANBAT-5200
(34x) TANBAT-2856
(15x) TANBAT-340

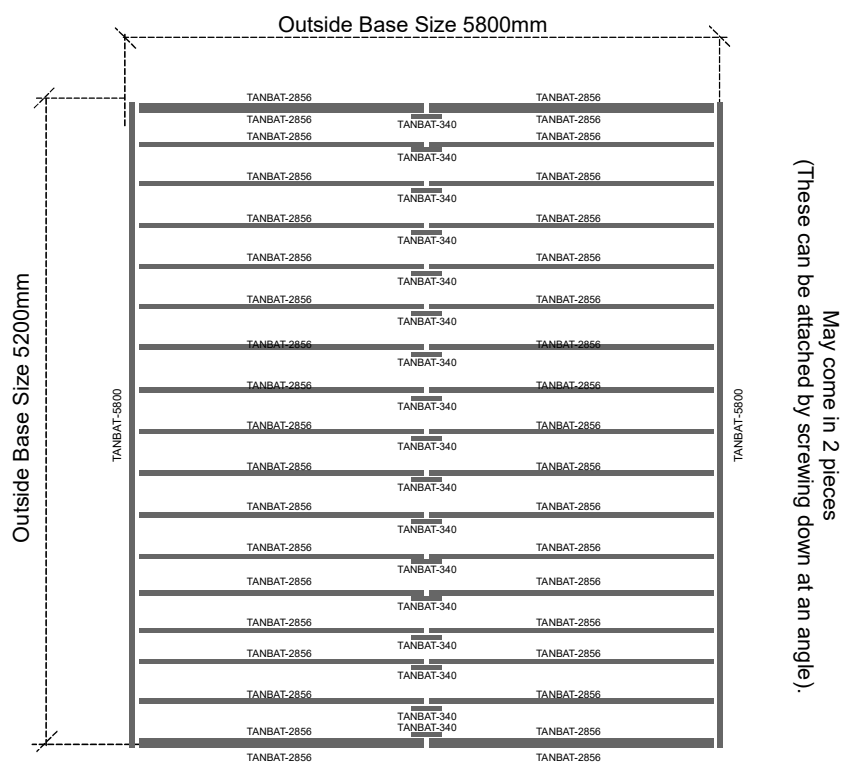


Component list for 20x18 Floor

- (51x) 19FB-5107
(2x) SB-5712
(2x) SB-5112

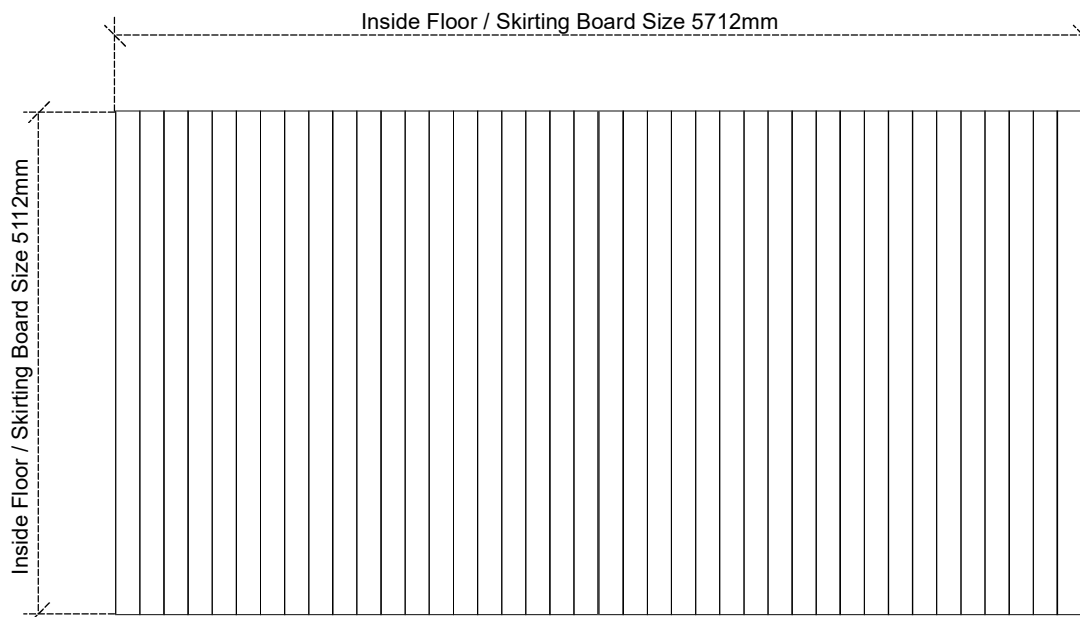





18' Blank Gable

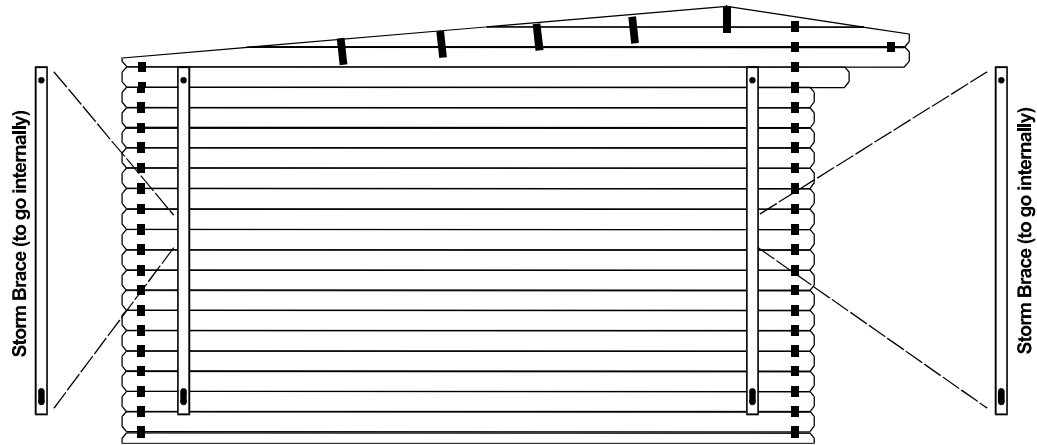


Build Diagram Order:-

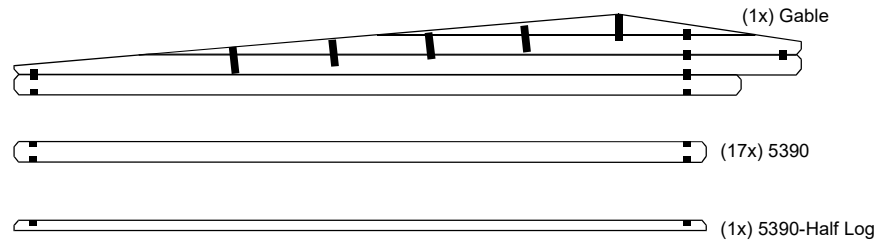

18'Window Gable

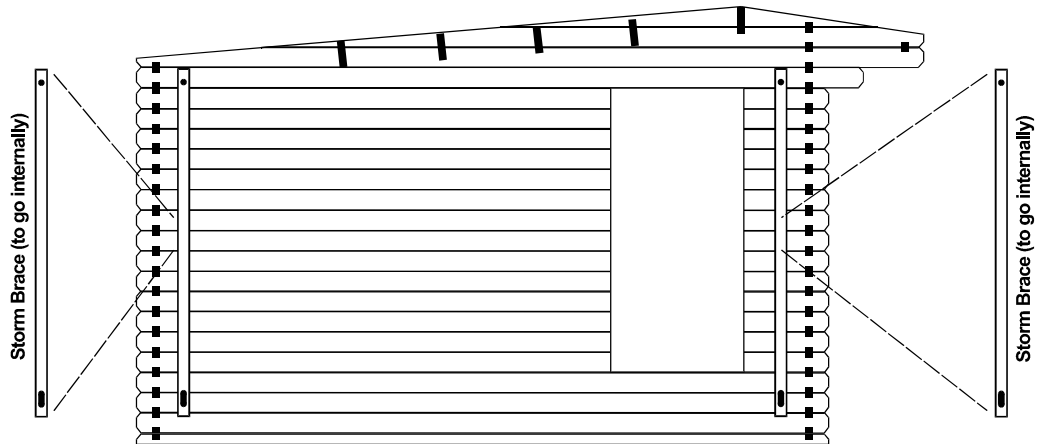


Build Diagram Order:-

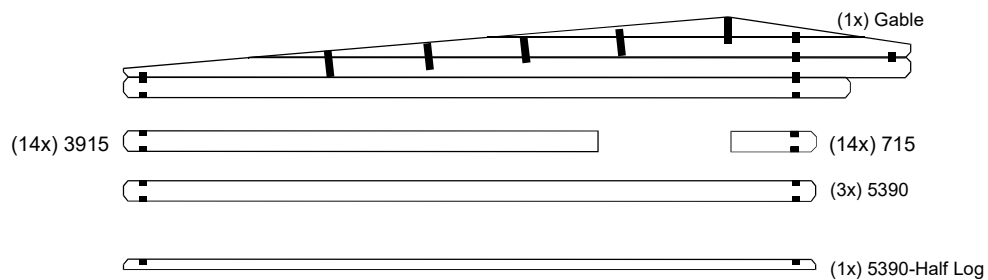




20' Double Door Side

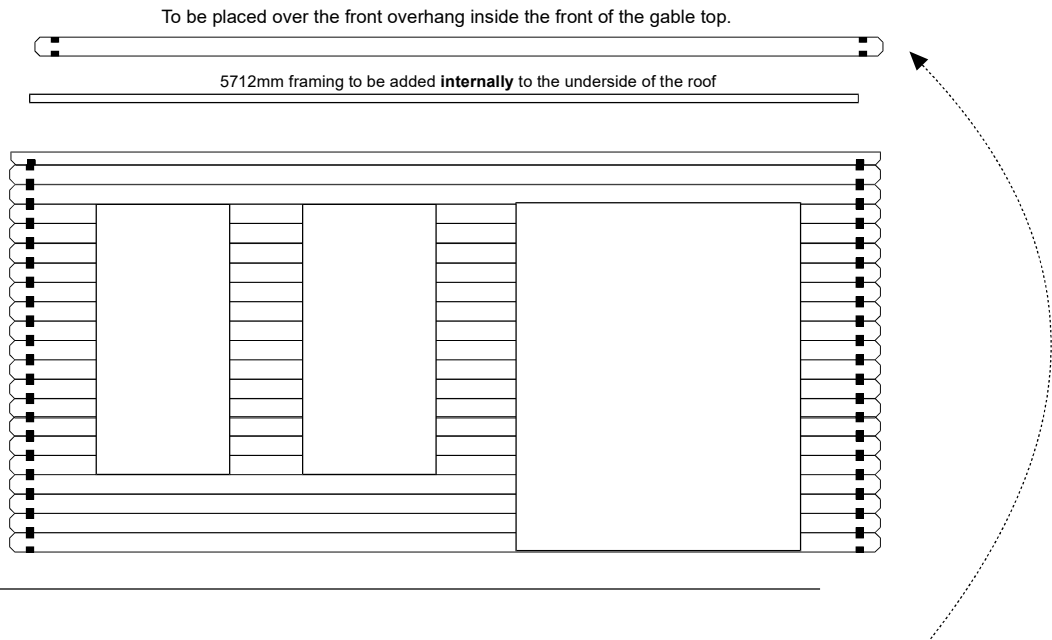

Build Diagram Order:-

- (1x) 5990
- (3x) 5990
- (14x) 715 (14x) 715 (14x) 715 (18x) 715
- (4x) 3665

20' Blank Side

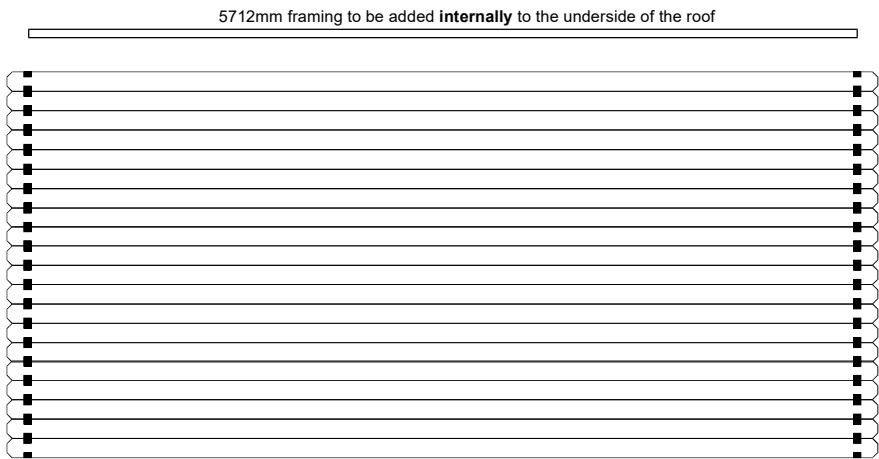


Build Diagram Order:-

- (19x) 5990

20x18w Powersheds Offset Apex 44mm

Powersheds®

- 1 Roof Purlin = (5x) 5990mm
- 2 Roof Framing = (2x) 5990mm
- 3 Roof Boards = (53x) 5107mm
- 4 Roof Boards = (53x) 1040mm
- 5 (2x) 18' Offset Roof Fascia A
- 6 (2x) 18' Offset Roof Fascia B
- 7 (2x) Peak

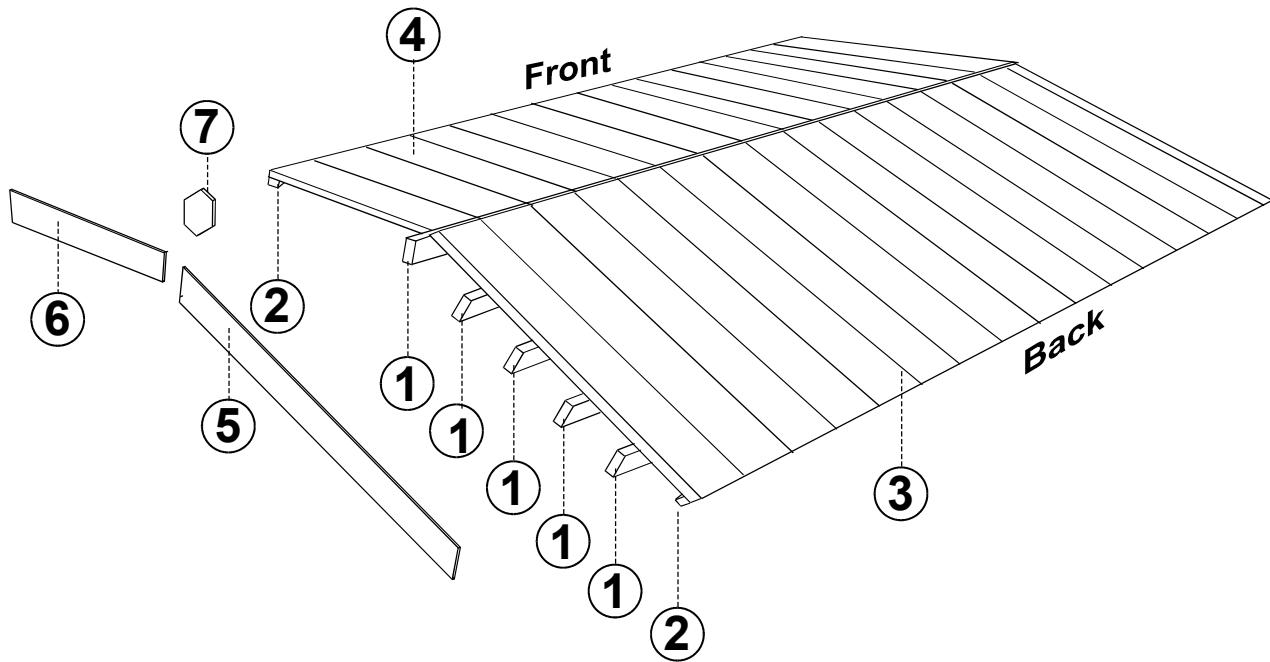

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.