




Base and Floor


Component list 12x10 Base

- (2x) TANBAT-2800
(11x) TANBAT-3312

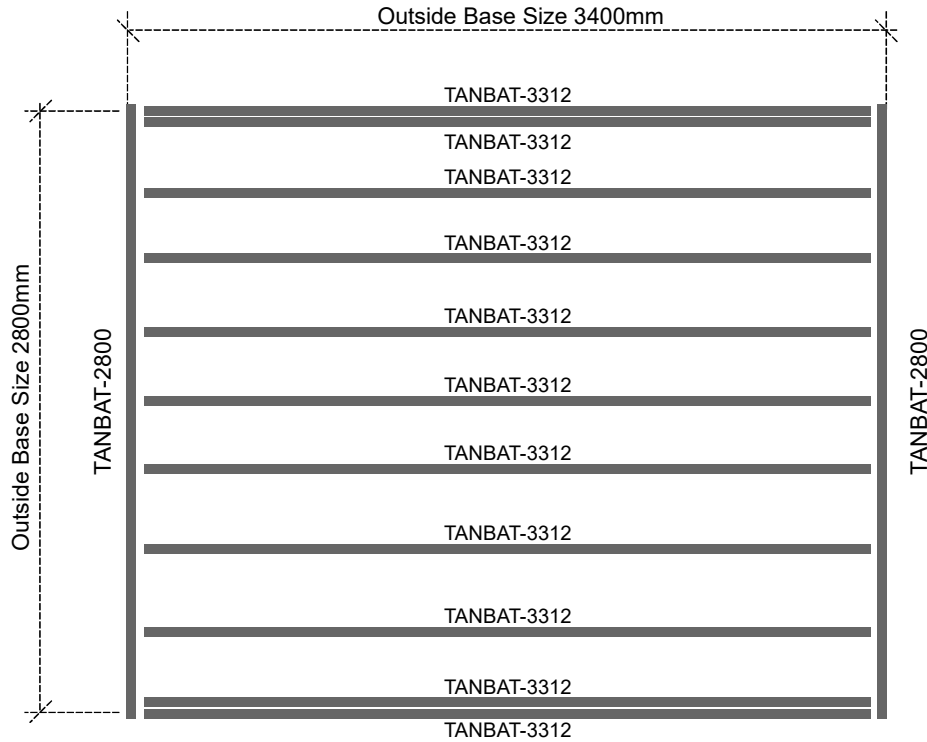


Component list for 12x10 Floor

- (30x) 19FB-2707
(2x) SB-3312
(2x) SB-2712

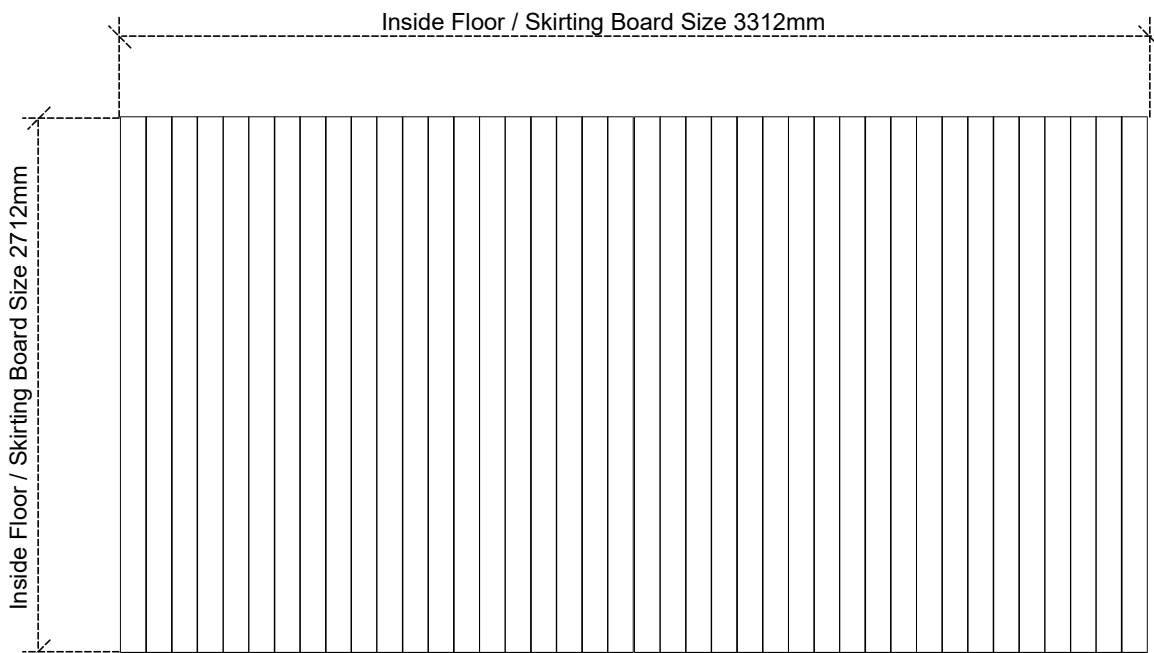





10' Blank Gable

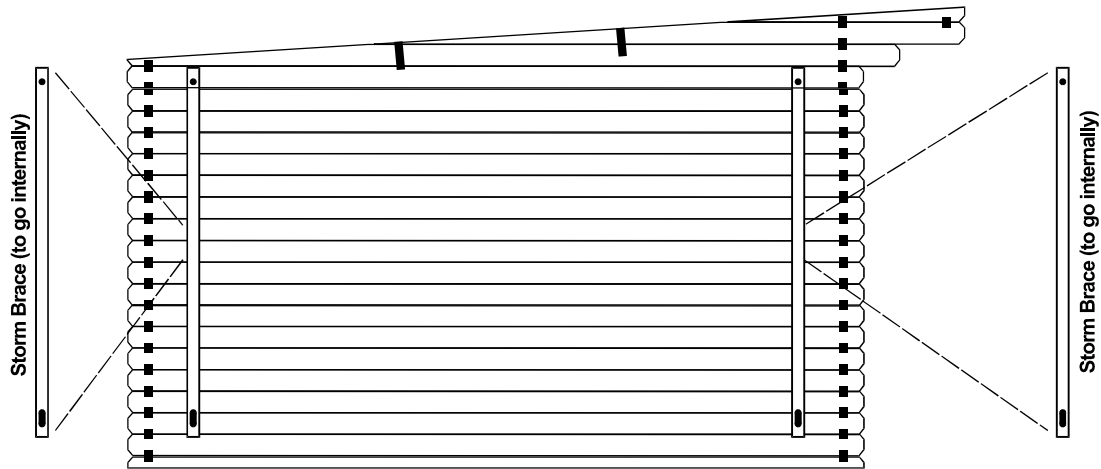


Build Diagram Order:-

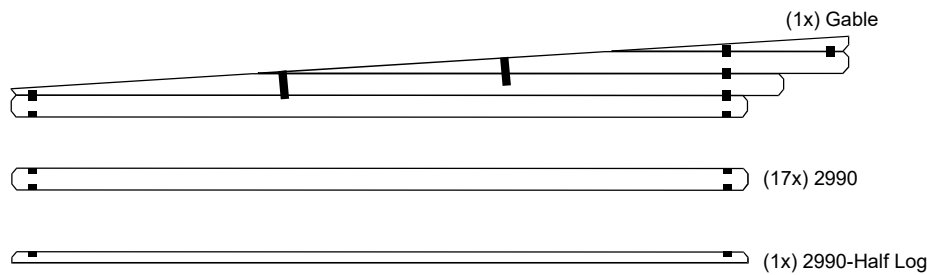

10'Window Gable

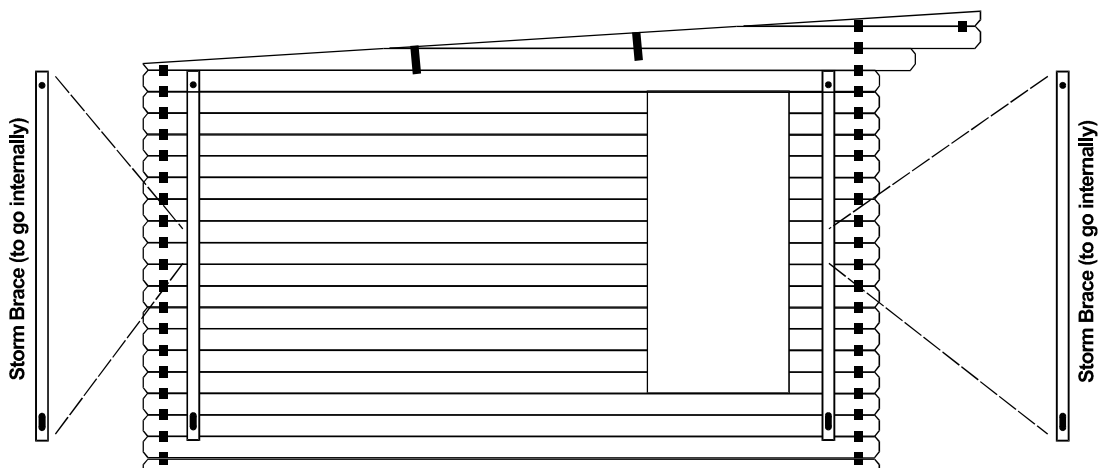


Build Diagram Order:-

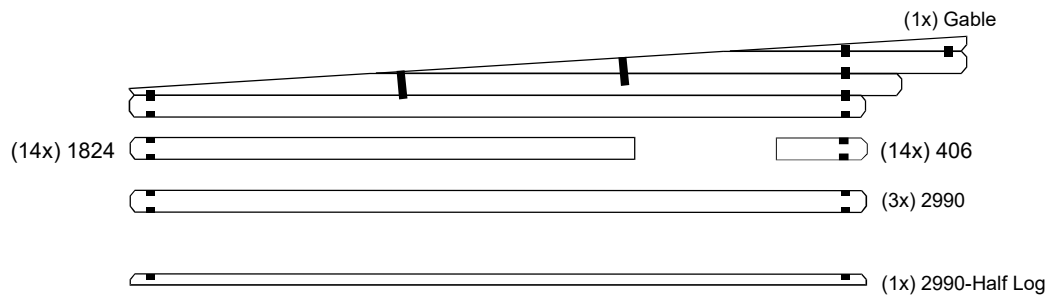





12’ Window Double Door Side

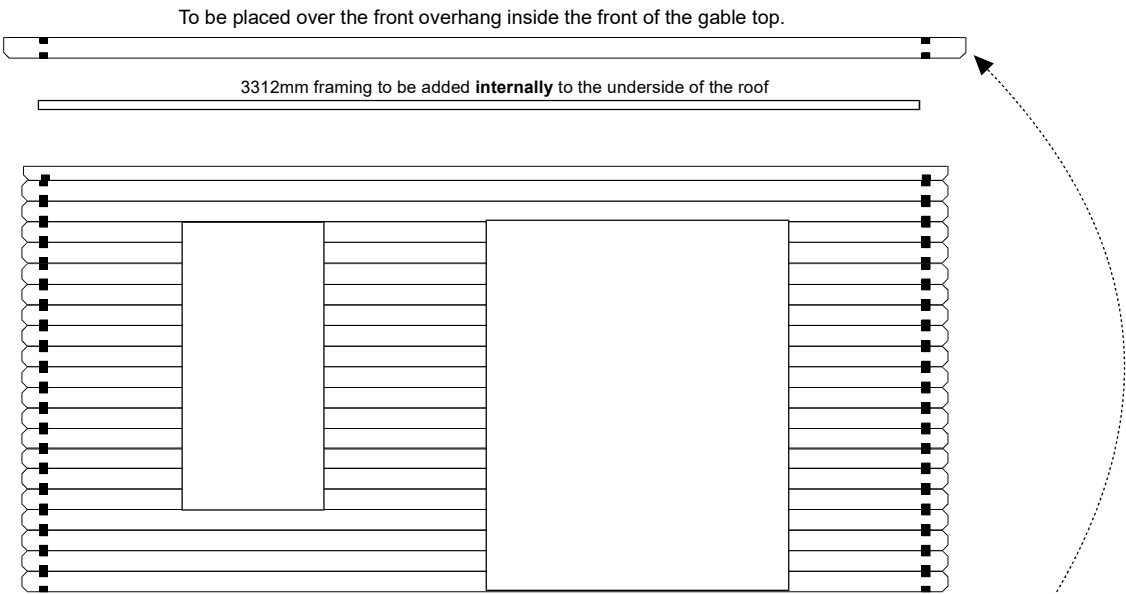


Build Diagram Order:-

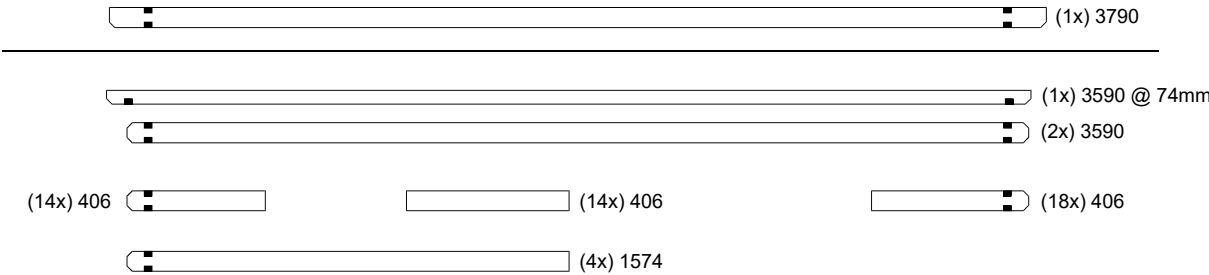

12’ Blank Side

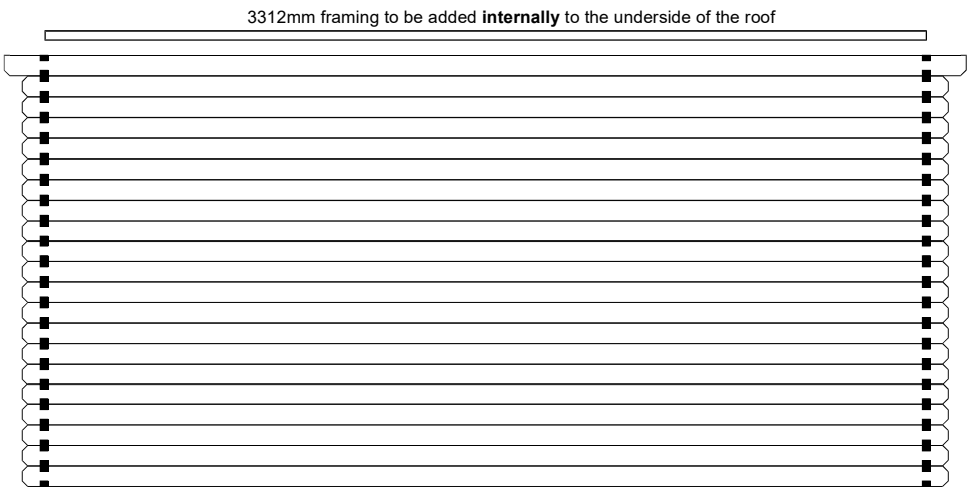


Build Diagram Order:-



12x10w Powersheds Pent 44mm

Powersheds®

- 1 Roof Purlin = (2x) 3790mm
- 2 Roof Framing = (2x) 3790mm
- 3 Roof Boards = (34x) 3700mm
- 4 (2x) 10' Pent Fascia
- 5 (1x) 12' Pent Fascia

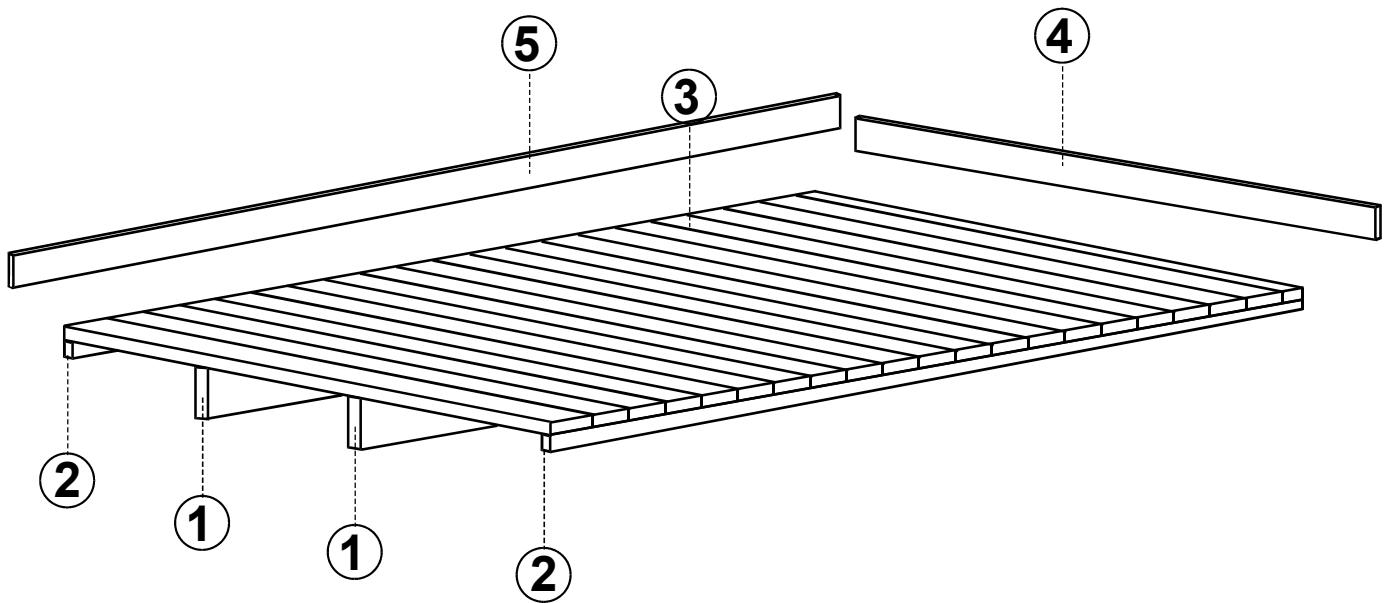

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.