




14x12w Powersheds Pent 44mm 1412PPLCWDD

Powersheds®

Base and Floor


Component list for 14x12 Base

- (2x) TANBAT-3400
- (26x) TANBAT-1956
- (11x) TANBAT-340

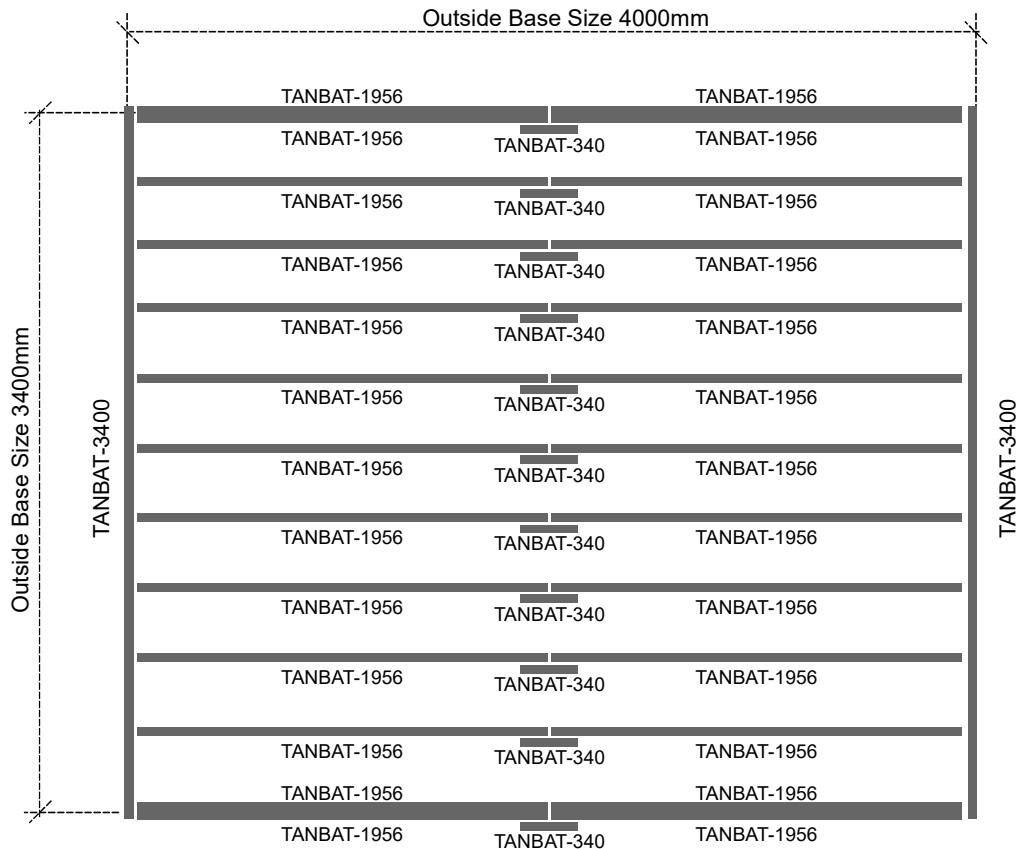


Component list for 14x12 Floor

- (35x) 19FB-3307
- (2x) SB-3912
- (2x) SB-3312

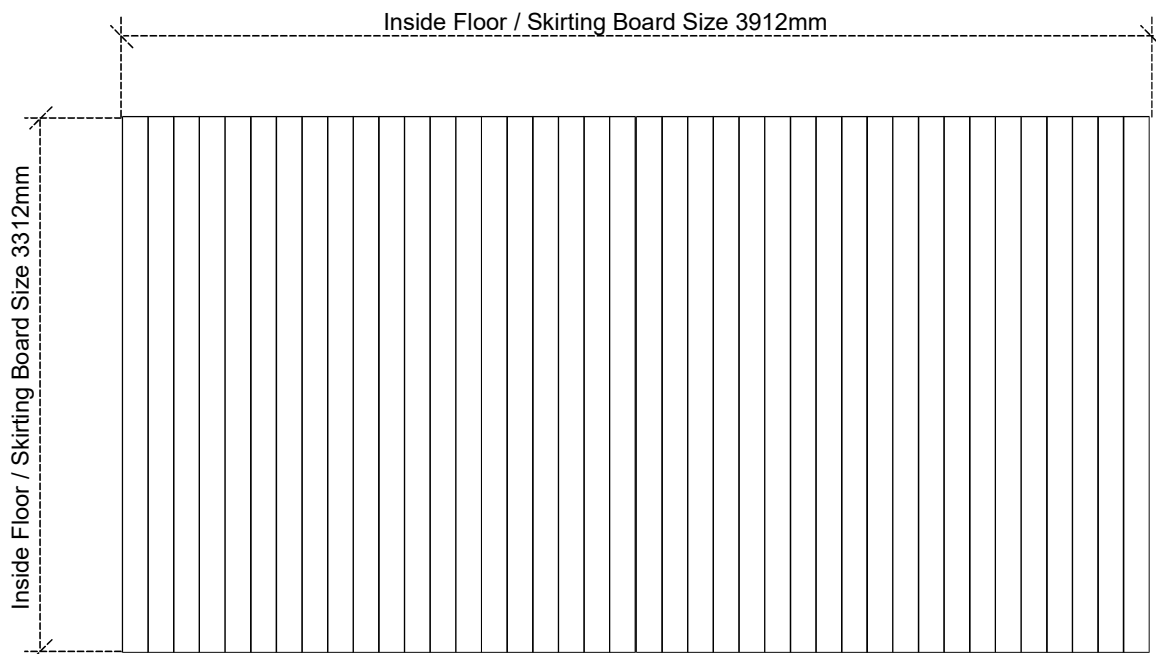





12' Blank Gable

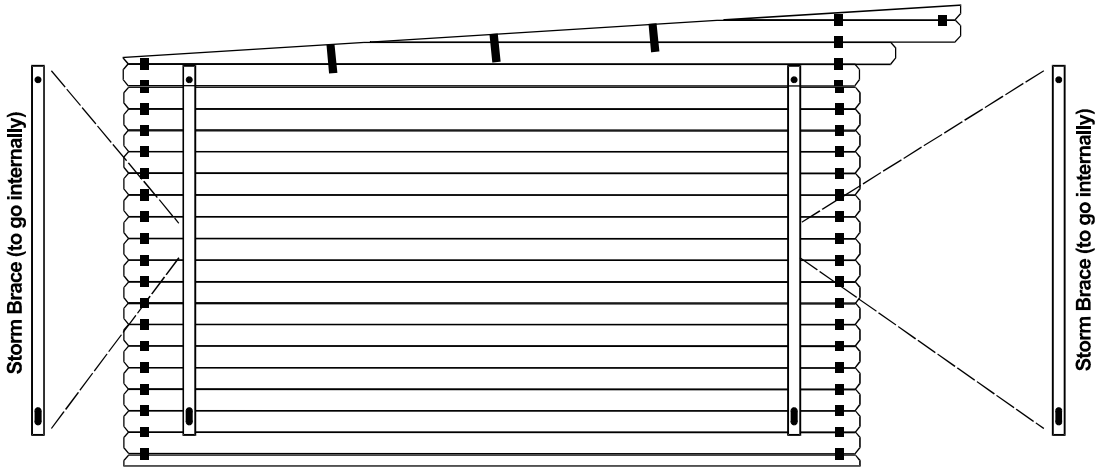


Build Diagram Order:-

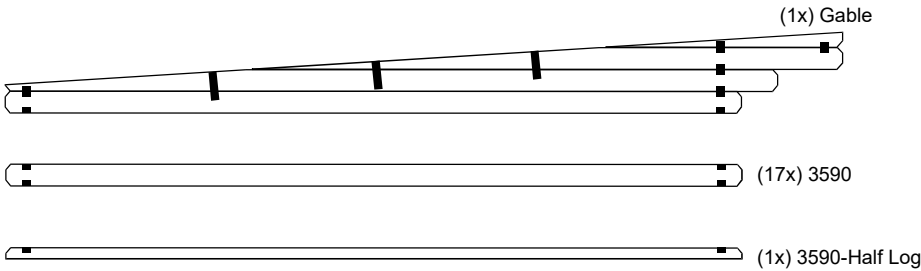

12' Window Gable

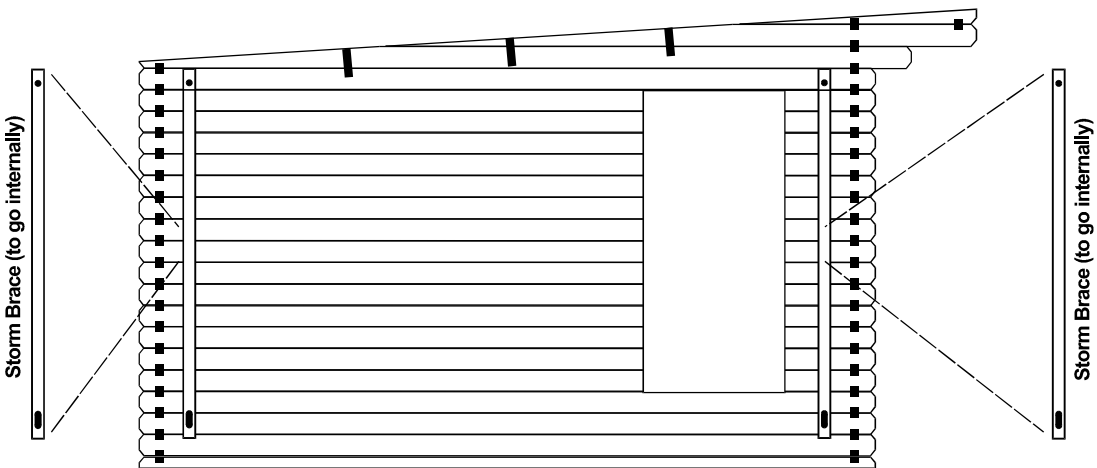


Build Diagram Order:-

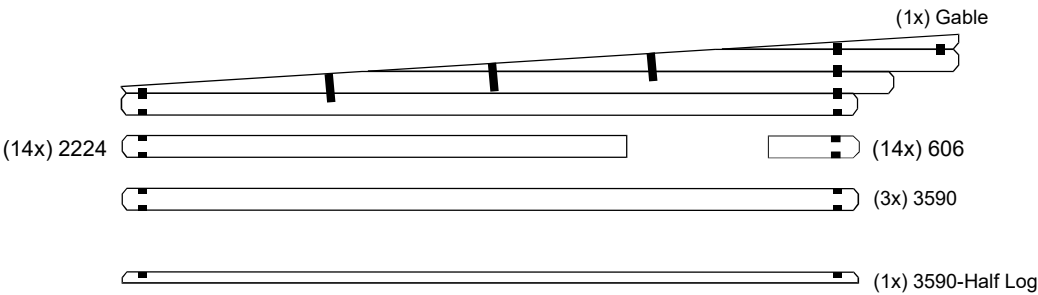




14’ Window Double Door Side

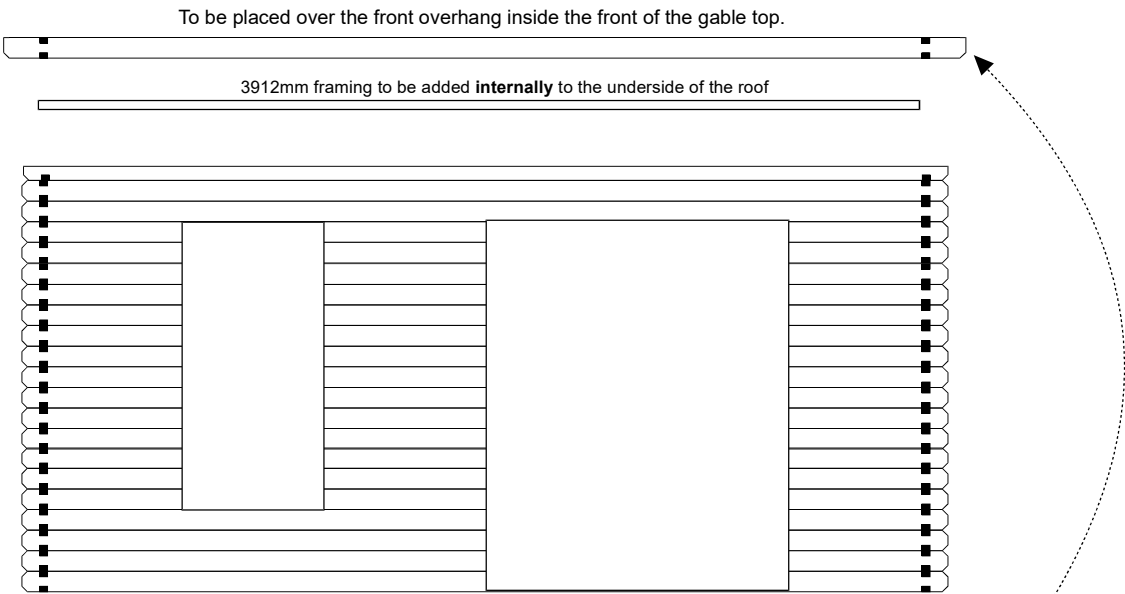

Build Diagram Order:-

- (1x) 4390
- (1x) 4190 @ 80mm
- (2x) 4190
- (14x) 606
- (14x) 606
- (18x) 606
- (4x) 1974

14’ Blank Side

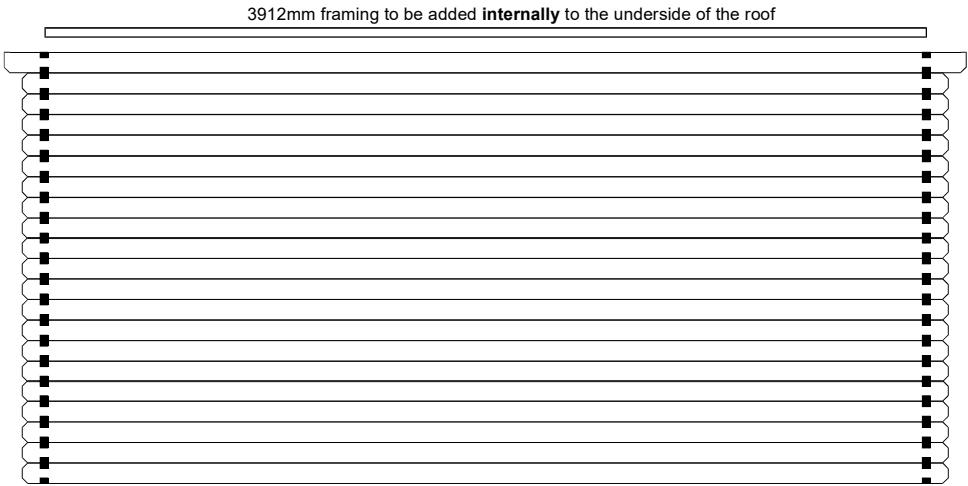


Build Diagram Order:-

- (1x) 4390
- (18x) 4190

14x12w Powersheds Pent 44mm

Powersheds®

- 1 Roof Purlin = (3x) 4390mm
- 2 Roof Framing = (2x) 4390mm
- 3 Roof Boards = (39x) 4300mm
- 4 (2x) 12' Pent Fascia
- 5 (1x) 14' Pent Fascia

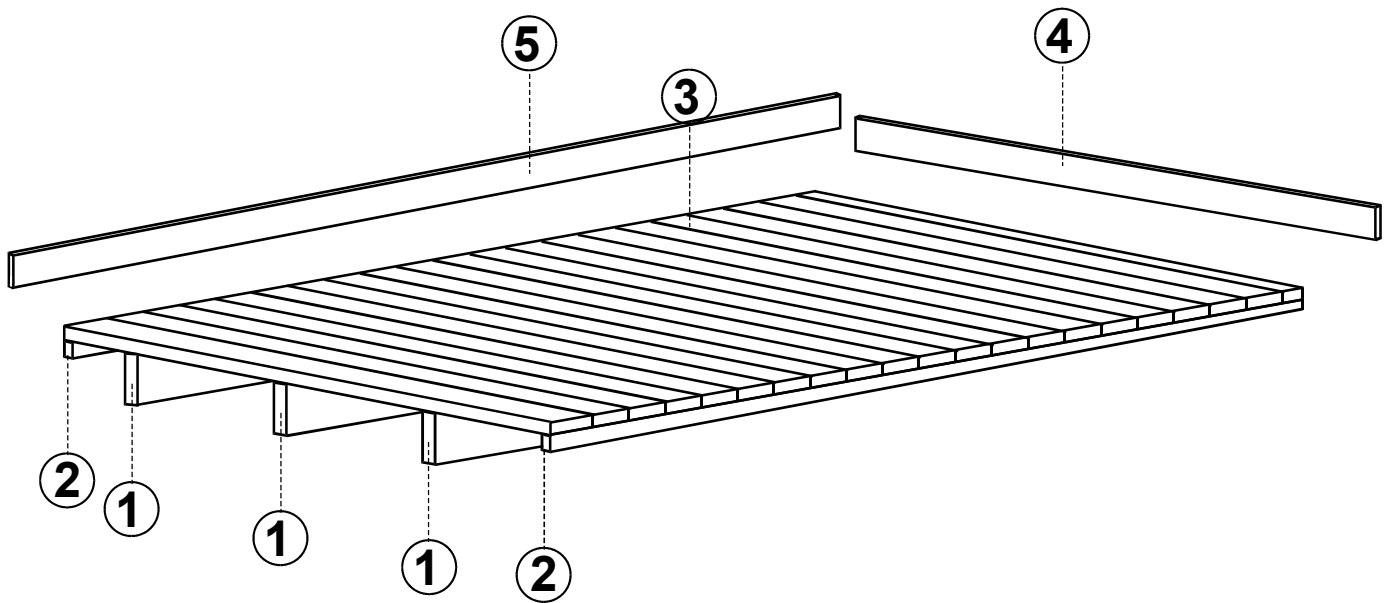

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.